




M Clayton
26/09/2017
V1
010021

PREPARED
DATE
VER NO.
PRODUCT CODE

Instruction Manual

For

IRiS Scanner

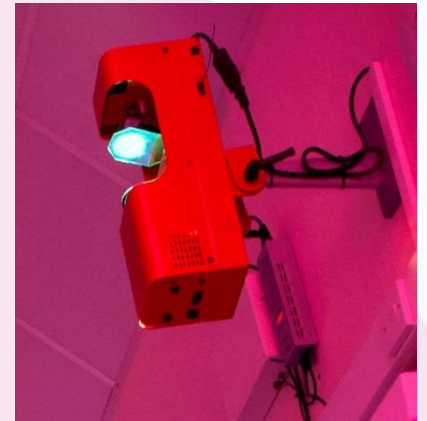

experia
multisensory for everyone

Experia
Acorn Phase 3, High Street
Barnsley, South Yorkshire
S72 7BD, United Kingdom

T 0800 612 6077
Einfo@experia-innovations.co.uk
Wwww.experia-innovations.co.uk

Instruction Manual

Congratulations on the purchase of your IRiS Scanner!

The IRiS Scanner has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of switching learning and fun!

The IRiS Scanner offers endless opportunities to develop numerous skills including colour recognition, cause and effect, and many more.

The IRiS Scanner is an IRiS Listener and can be controlled by any number of IRiS Talkers.

Please ensure you read this Instruction Manual in full before operating the unit.

Heed all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. This product is intended to be installed and/or use by a trained professional. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

Features

- IRiS Wirefree Compatible
- Ergonomic Design
- Colour Coded for easy recognition
- LED: you never have to change a lamp
- Durable
- Easy to use
- 3 Year Manufacturers Guarantee (Return to base)

Getting Started

1. Using the 'Y' IEC cable, connect either IEC to the Scanner and the IRiS control box.
2. Connect the XLR cable from the control box to the DMX IN on the scanner
3. Connect the standard plug to a suitable mains outlet.
4. The unit will now illuminate and scroll through the standard IRiS colours before going out.
5. Now it's ready to use.
6. Decide which Talker you want to control the IRiS Scanner with then go to the Pairing section.

Pairing to IRiS Listeners

This procedure is split into 2 sections, one for those who do not have an IRiS Master Pairer and for those who do.

Without an IRiS Master Pairer

Every IRiS Listener has a button on it called a pairing button. To get the IRiS Scanner to work with a product, first turn on the IRiS Scanner then decide which IRiS Talker you want to control it with – in this example we use the IRiS Lightwand but all pairing works in the same manner.

Next find the pairing button on the bottom of the IRiS Scanner and press it. You then need to activate the IRiS Lightwand within 5 seconds (in this case you would press the button on the Lightwand). If correctly paired, the light from the IRiS Scanner will now change colour every time you press the button and will move around the room when you move the joystick on the Lightwand. If it does not, then repeat the above.

To put the unit into Calming mode, press the pair button on the front of the control box and do not activate any IRiS Talker, the light from the Scanner will now change colour and move around the room on its own.

With an IRiS Master Pairer

To get the IRiS Scanner to work with a product, first turn on the IRiS Scanner then decide which IRiS Talker you want to control it with – in this example we use the IRiS Lightwand but all pairing works in the same manner. Then find the button on the IRiS Master Pairer that corresponds with the Scanner and press it. You then need to activate the IRiS Lightwand within 5 seconds (in this case you would press the button on the Lightwand). If correctly paired, the light from the IRiS Scanner will now change colour every time you press the button and will move around the room when you move the joystick on the Lightwand. If it does not, then repeat the above.

To put the unit into Calming mode, find the button on the IRiS Master Pairer that corresponds with it and press it. Do not activate any IRiS Talker. The light from the Scanner will now change colour and move around the room on its own.

Instruction Manual

Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non-abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the unit.

The unit has been designed for use by people with special needs however this does NOT mean it is unbreakable.

Troubleshooting

Note – There are a bank of 10 DIP switches one the scanner. These must not be moved from the setting of 1 ON, 2 to 10 OFF, changing these will stop the IRiS box from controlling the scanner.

Q. The unit doesn't work.

A1. Is it switched on? If so, see A2

A2. Has the unit scrolled through its colours? If so, see A3

A3. Has the unit been paired to an IRiS Talker? If so, see A4

A4. Is the battery in the IRiS Talker fully charged? If so, see A5

A5. Have you tried a different IRiS Talker? If so, please contact us.

Instruction Manual

Contact Details

For USA please email office@experia-usa.com

For Ireland please email support@experia-ireland.ie

For UK and rest of the world email support@experia-innovations.co.uk

Telephone: 0044 (0) 845 644 0977.

Please note: email is our support teams preferred communication and this takes precedence over telephone calls.

QUESTIONS & IDEAS?

If you have an idea on how to improve this product or want to see your product idea realised, please email: ideas@experia-innovations.co.uk.

All ideas are presented to our OT, technical and finance department and if all procedures are passed we will contact you to discuss your idea further.

We can't promise to develop every product but if it's a great idea, we'll try!

Manufactured proudly in the UK by:

Experia, Acorn Phase 3, High Street, Grimethorpe, S72 7BD.



© Copyright 2017 Experia All rights reserved. Experia is a registered trademark