


M Clayton | PREPARED  
05/10/2017 | DATE  
V1 | VER NO.  
010065 | PRODUCT CODE



# Instruction Manual

For

## IRiS LED Infinity Tunnel (3 Shapes)

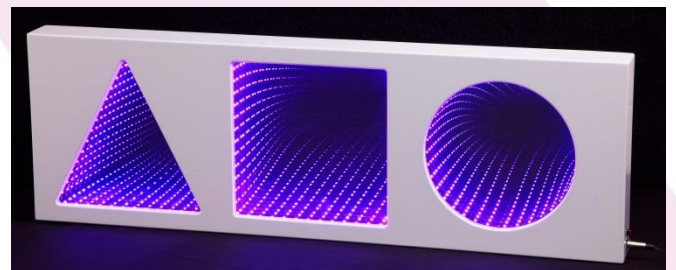

experia  
multisensory for everyone

Experia  
Acorn Phase 3, High Street  
Barnsley, South Yorkshire  
S72 7BD, United Kingdom

T 0800 612 6077  
Einfo@experia-innovations.co.uk  
Wwww.experia-innovations.co.uk

# Instruction Manual

**Congratulations** on the purchase of your IRiS LED Infinity Tunnel (3 shapes)!

The IRiS LED Infinity Tunnel (3 shapes) has been designed specifically for people with special needs and should, if used in accordance with these guidelines, offer years of switching learning and fun!

The IRiS LED Infinity Tunnel (3 shapes) offers endless opportunities to develop numerous skills including colour recognition, cause and effect, and many more

The IRiS LED Infinity Tunnel (3 shapes) is an IRiS Listener and can be controlled by IRiS Talkers.

**Please ensure you read this Instruction Manual in full before operating the unit.**

Heed all warnings on the product and within this manual. If upon receipt of this product, the user suspects that the product is defective, and/or requires service or repair due to malfunction or damage to the product, please contact the manufacturer immediately. Please be aware that improper installation and/or use or misuse of this product may result in injury, death, or adverse reactions to its user. This product is intended to be installed and/or use by a trained professional. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended uses of the product.

## Features

- IRiS Wirefree Compatible
- Ergonomic Design
- Latest LED Technology
- Hundreds of Shades of Colour
- No Lamp Change – LED
- Completely Silent
- Safe Low Voltage – transformer supplied
- Easy upgrade/maintenance
- Durable
- Easy to use
- 3 Year Manufacturers Guarantee (Return to base)

**We recommend the IRiS LED Infinity Tunnel (3 shapes) be installed by a competent person by following the installation manual supplied with this product**

# Instruction Manual

## Getting Started

1. Connect the XLR connector from the transformer supplied into the socket on the left side of the IRiS LED Infinity Tunnel (3 shapes).
2. Connect the standard mains plug to an electrical outlet.
3. Switch on the electrical outlet.
4. The IRiS LED Infinity Tunnel (3 shapes) will now illuminate and go through its colours and go off.
5. The unit is ready for use.
6. Decide which IRiS Talker you want to use to control the IRiS LED Infinity Tunnel (3 shapes) with then go to the Pairing section below.

## Pairing to IRiS Listeners

This procedure is split into 2 sections, one for those who do not have an IRiS Master Pairer and for those who do.

### ***Without an IRiS Master Pairer***

Every IRiS Listener has a button on it called a pairing button. To get the IRiS LED Infinity Tunnel (3 shapes) to work with a product, first turn on the IRiS LED Infinity Tunnel, then decide which IRiS Talker you want to control it with – in this example we use the IRiS Qube, but all work in the same manner. Next, find the pairing button (located next to the power socket) on the product and press it. You then need to activate the IRiS Qube within 5 seconds (in this case you would turn the Qube over). The IRiS Infinity Tunnel (3 shapes) will now change colour every time you turn the Qube if correctly paired. If it does not, then repeat the above.

### ***With an IRiS Master Pairer***

To get the IRiS LED Infinity Tunnel (3 shapes) to work with a product, first turn on the IRiS LED Infinity Tunnel (3 shapes) then decide which IRiS Talker you want to control it with – in this example we use the IRiS Qube, but all work in the same manner. Then find the button on the IRiS Master Pairer that corresponds with the IRiS LED Infinity Tunnel (3 shapes) and press it. You then need to activate the IRiS Qube within 5 seconds (in this case you would turn the Qube over). The IRiS Infinity Tunnel (3 shapes) will now change colour every time you turn the Qube if correctly paired. If it does not, then repeat the above.

# Instruction Manual

## Cleaning and Maintenance

The unit should be cleaned with a damp soft cloth. A non-abrasive cleaning agent may be used for stubborn stains. Ensure no liquid enters the base of the unit.

The unit has been designed for use by people with special needs, however this does NOT mean it is unbreakable. You must ensure the unit is not hit with anything and that no one pulls or pushes the unit.

## Troubleshooting

Q. The unit doesn't work.

A1. Is it switched on? If so, see A2

A2. Has the unit scrolled through its colours? If so, see A3

A3. Has the unit been paired to an IRiS Talker? If so, see A4

A4. Is the battery in the IRiS Talker fully charged? If so, see A5

A5. Have you tried a different IRiS Talker? If so, please contact us.

# Instruction Manual

## Contact Details

For USA please email [office@experia-usa.com](mailto:office@experia-usa.com)

For Ireland please email [support@experia-ireland.ie](mailto:support@experia-ireland.ie)

For UK and rest of the world email [support@experia-innovations.co.uk](mailto:support@experia-innovations.co.uk)

Telephone: 0044 (0) 845 644 0977.

Please note: email is our support teams preferred communication and this takes precedence over telephone calls.

## QUESTIONS & IDEAS?

If you have an idea on how to improve this product or want to see your product idea realised, please email: [ideas@experia-innovations.co.uk](mailto:ideas@experia-innovations.co.uk).

All ideas are presented to our OT, technical and finance department and if all procedures are passed we will contact you to discuss your idea further.

We can't promise to develop every product but if it's a great idea, we'll try!

**Manufactured proudly in the UK by:**

Experia, Acorn Phase 3, High Street, Grimethorpe, S72 7BD.



© Copyright 2017 Experia All rights reserved. Experia is a registered trademark